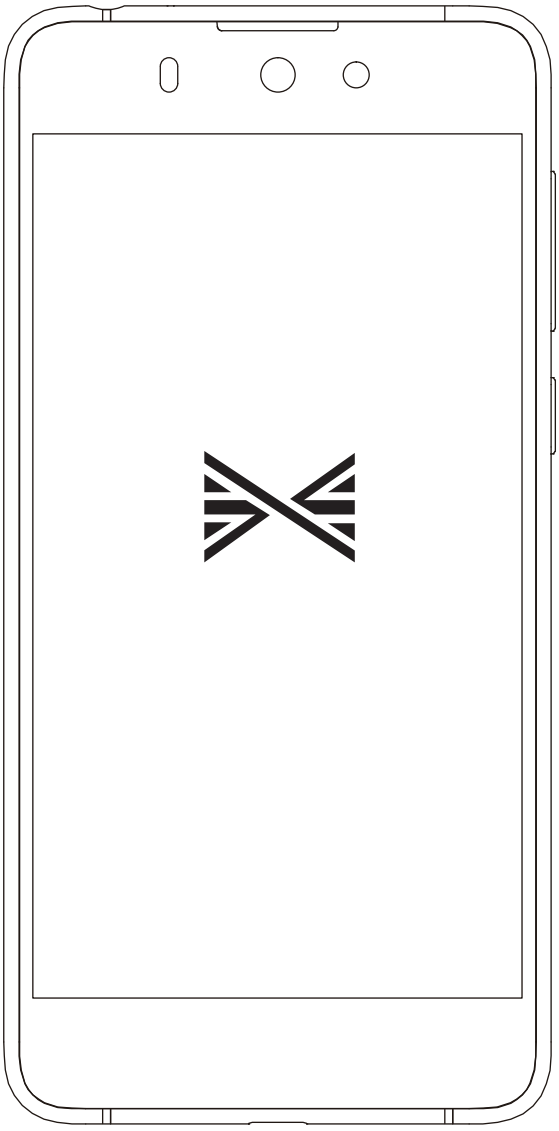

POSH MOBILE

User Guide

Optima LTE

L530

www.poshmobile.com

Table of Contents

POSH OPTIMA LTE L530 ..... **1**

Introduction **4**

Device Layout 4

Safety Notices **5**

Getting Started **6**

Touch screen 6
Assembly & Charging 6
Turning the device On and Off 8
Home screen 9
Text entry ..... 錯誤! 尚未定義書籤。
Edit Text 9
Select Text 9
Shortcut 10
Bluetooth 10

Phone **10**

Making a call 10
During a call 10
Emergency calls 11
Make International Calls 11
Answering Calls 11
Call History 12

Contacts **12**

Adding a Contact manually 12
Searching for contacts 12
Additional options 12
Contact groups 12
Favorites 13

Messages **13**

New message 13
Delete message threads 14
Forwarding a message 14

Web applications **14**

(Wi-Fi) 14

Browser 15

Multimedia **15**

Camera 15

Music Player 15

Videos 15

FM Radio 16

Gallery 16

Sound Recorder 16

Other applications **16**

Clock Function 16

Calculator 16

File manager 16

Connect to a computer via USB 16

Introduction

Please read and follow the instructions in this manual. To prevent any possible incidents or malfunction, please follow all safety warnings. If because function upgrade cause described in the manual content does not accord with actual products, please refer to our company subsequent release of information.

Device Layout

1	Volume key	2	Power key	3	SIM/SD slot
4	Touch screen	5	Headset jack	6	P/L sensor
7	Front camera	8	Earpiece	9	Camera
10	Flash	11	Fingerprint	12	Rear Housing
13	MIC hole	14	Charging (Port)	15	Speaker

Safety Notices

Please read the information below, as well as the entire User Manual to ensure safe and proper use of your device.

- Please select Flight Mode while traveling by aircraft or in any situation where you are advised that the device may cause unwanted interference.
- Power off the device near fuel, chemicals, blasting areas, or any other locations where use is forbidden.
- The device may affect the functioning of electronic equipment and medical devices, including but not limited to pacemakers, hearing aids and other electronic equipment and medical devices.
- Use only Posh Mobile approved accessories. Using non-approved accessories may cause performance problems and malfunctions that are not covered under warranty and may pose a health hazard.
- Please do not dissemble or attempt to disassemble the device by yourself. If your device is not working properly ,please contact your supplier or the manufacturer
- The battery must be inserted in the device prior to charging.
- Device must be charged in a well ventilated and cool environment, and away from flammable and explosive materials.
- The device must be kept away from magnetic material ,including but not limited to disks and credit cards.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that may corrode electronics. If your device does get wet, conctact the supplier or manufacturer before handling the device.
- Do not operate the device in extreme temperature environments, and do not expose the device to direct sunlight or high humidity.
- Do not use liquid or a wet cloth with strong detergent to clean the device.
- Modifying the devices operating system or installing software from unofficial sources may result in device malfunction and data corruption or loss. These actions may also void the device warranty and/or violate intellectual property rights.
- Please dispose of batteries according to local regulations, and recycling laws. Please do not dispose as household waste.

- You should routinely check the User Manual on the manufacturer's website to stay informed of revisions and updates.
- Please obey all laws regarding use of your device, including but not limited to laws related to driving and taking photographs, video or audio.
- Failure to adhere to the provisions herein may lead to death or serious injury.

STATEMENT: **Our Company reserves the right to revise this manual content without prior notice**.

Getting Started

Touch screen

Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the touch screen.
You can also change the screen's orientation from portrait to landscape
To select or activate something, touch it.
To type something, such as a name, password, or search terms, just touch where you want to type. A keyboard pops up that lets you type into the field.
Other common gestures include:

- **Touch & hold:** Touch & hold an item on the screen by touching it and not lifting your finger for more than 2 seconds to access available options.
- **Drag:** Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. For example, you can drag to reposition shortcuts on the Home screen.
- **Swipe or slide:** Quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens. You can also swipe upwards or downwards as well.
- **Double-tap:** Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a webpage in Browser to zoom in, and double-tap again to zoom out.
- **Pinch:** In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen**: On most screens, the orientation of the screen rotates with your device as you turn it. You can change this in Display Setting.

Assembly & Charging

- Installing the SIM card

Install the SIM card provided by your mobile telephone service provider. Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing the correct direction (per the label on the inside of the device). Slide the SIM card into the card slot until it stops.

- Installing the SD card

Slide the SD card into the SD card slot with the metallic pins facing downwards. Push the card until it locks into place.
Warning： Use only compatible memory cards for use with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

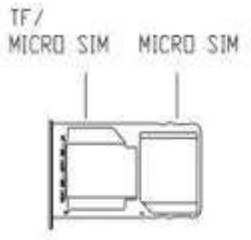

- Installing the battery

Remove the back cover of the device to expose the battery cavity. With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place. Replace the back cover, making sure it is securely in place.

■ Charging the battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at your phone (USB interface) and then plug the other end into an AC power socket.
The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. Disconnect the charger from the phone. Disconnect the charger from the AC power socket.

Attention: Charge the phone in a well ventilated place in which the temperature is between -10ºC to +55 ºC. Use the charger provided by the manufacturer only. The use of an unapproved charger may cause problems and malfunctions and may void the warranty. If the temperature is too high or too low during the charge, the device will automatically send a warning and stop charging to avoid damage to the battery.

Turning the device On and Off

Press and hold the Power key for a few seconds to turn on the device. If the device is powered on but the SIM card isn't inserted, the lock screen will show "No SIM card"
After inserting the SIM card, the screen will show the notes in the following order when the phone is switched on:

Type in PIN — If you have already set the SIM code.

Search—The handset will be searching for proper network connection.

Home screen

Quick start: Home screen

The Home screen is the starting point for accessing all of your device's features. It is what appears when you initially turn on the phone. It is the equivalent of the desktop on a computer. You can customize your Home screen with shortcuts, widgets, folders, and wallpapers.

You can slide the Home screen left or right to view more content in other panels.

An on-screen keyboard will automatically appear while you are sending text messages, emails, or creating memos, etc.Touch the keys of the on-screen QWERTY keyboard to enter text. You can open this keyboard by touching a text field.

Enter text

Touch the keys on the keyboard to type.

- Use the **Delete key** to erase characters to the left of the cursor.
- When you have finished typing, Press the **Back key** to close the keyboard.

Enter Various Characters

- Touch the **Symbols key** to switch to the numbers and symbols keyboard.
- Touch on the symbols keyboard to view additional symbols.

Edit Text

You can edit the text you have entered in text fields and use menu commands to cut, copy, and paste text, within or across applications. Some applications do not support editing some or all of the text they display. Others may offer their own way to select text you want to work with.

- Touch and hold the text field that contains the text to select the word.
- Cut or copy the text.

Select Text

You can select text for cutting or copying. The selected text is highlighted in blue.

- Touch and hold the portion that contains text. Some options open with icons.
- Move the cursor to select the text.

Shortcut

■ To add a shortcut to Home screen

1. From Home screen, touch Launcher icon.
2. From APPS tab, you will see application menu.
3. Touch and hold an application icon until it vibrates, then back to the Home screen, and drag it to the desired location.

■ To remove a shortcut on Home screen

If you want to remove the shortcut, you can touch and hold the shortcut icon on Home screen until it vibrates, and then drag it to Remove tab.

.

Bluetooth

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters.

Pairing with other Bluetooth devices:

1. On the Settings screen, tap **Bluetooth**, then tap the switch to activate it. The detected devices will be listed
2. Select a device to pair with. If the device you want to pair with is not on the list, request that the device turn on is visibility option
3. Accept the Bluetooth connection request on your device to confirm.

Phone

Making a call

Touch phone icon on the Home screen.
Enter a phone number and tap the Dial icon to place the call.

During a call

During a call, there are some call options available to you. These call options can be seen only during a call. When a call is in progress, you can put it on hold, initiate a phone conference, mute your microphone etc.

Touch	Go to the key pad
Touch	To turn on/off the speaker.
Touch	Mute your voice so that the other party cannot hear you.
Touch	To place a call on hold.
Touch	Open dial pad to dial a second call.

Emergency calls

You can call for emergency service as long as you have network coverage (check the signal strength indicator bar on the upper right side of the handset screen). If your network provider doesn't allow roaming "Emergency Calls " will be shown on the lock screen. If you are have network coverage, you can place emergency calls even without a SIM card.

Make International Calls

If you need to make an international call, press and hold the “0” key on the virtual keyboard until a "+" sign appears , then enter the country code, area code, and phone number, then tap the phone icon.

Answering Calls

Drag the phone icon outside the large circle to answer to answer an incoming call. If your headphone is connected to the handset, you can use the headphone key on the headphone answer calls.

Attention: A short press of the headphone key will answer the call while a long one will ignore the call.

Call History

You can open the notification panel to view a list of All Calls, Answered Calls, Dialed Calls, or Missed Calls

Contacts

Adding a Contact manually

1. Tap **Contacts** on the Apps screen

.

2. Touch

3. Select a location to save.

4. Enter the information for the contact.

5. When you are finished, tap **DONE**

Searching for contacts

1. On the Apps screen, tap **Contacts**

2. Drag a finger along the right side of the contacts list to scroll quickly.

3. Touch .

4. Input search criteria.

Additional options

From contacts list screen, Press the Menu key to show some additional options. For example, import/export contacts, and share visible contacts.

- Delete contact: You can mark one or more contacts, and then delete those selected.
- Contacts to display: To select which contacts to display in the contacts list.
- Import/export: Select contacts you wish to import or export.
- Accounts: You can synchronize your phone contacts with another account.
- Share visible contacts: You can share contacts via Bluetooth, Email, MMS, etc.

Contact groups

You can bundle contacts into groups for convenient and efficient communication. It allows you to create a new

groups such as VIP, schoolmates, friends, family, co-workers, etc.

- To create a new group

1. From your Home screen, tap the **Contacts** icon or find it via: **Application menu >Contacts**.
2. Tap the **Groups** tab.
3. Touch .
4. Input the information of group, then touch **DONE**.

- To assign a contact to a group

1. From your Home screen, tap the **Contacts** icon or find it via: **Application menu >Contacts**.
2. Tap the **Groups** tab.
3. Tap a group to which you want to assign contacts.
4. Tap the **Menu key**, tap **Edit** in the menu.
5. Tap **Type person's name** to input the contact's name, then the corresponding contact entry will pop up, select the desired contact entry.
6. After you finish editing, tap **DONE.**

Favorites

You can designate people that you contact frequently as "Favorites" for easier access.

- To set a contact as favorite

1. From your Home screen, tap the **Contacts** icon or find it via: **Application menu > Contacts**.
2. From the contacts list, tap a contact which you want to set as a favorite.
3. Touch . If you want to cancel the favorite, touch .

Messages

You can compose, send and receive text messages from your phone, and also can compose, send and receive multimedia messages, which contain media files such as pictures, videos and audios.

When you view your messages, they appear as conversations, which means that all messages to and from a particular person are grouped together.

New message

1. From your Home screen, tap the **Messages** icon or find it via: **Application menu > Messages**.
2. Tap .
3. To add recipient(s), touch , then find and mark the desired contact name. To add more than one contact, mark the contact name for the desired recipients. You can also enter the recipient's phone number manually.
5. Tap **Type text message** to enter your message text.

6. If you want to insert a media file, touch , and select an attachment.
7. To send the message, touch

When editing the message, tap the **Menu key**, and some additional options will be available to you. For example, you can add a subject, and insert smiley or other emoticon.

Delete message threads

1. From your Home screen, tap the **Messages** icon or find it via: **Application menu > Messages.**
2. ap and hold the message thread.
3. Select the conversations you want to delete.
4. Touch .

You can also tap the **Menu key** and touch **Delete all threads** to delete all message threads from the window.

Forwarding a message

1. From your Home screen, tap the **Messages** icon or find it via: **Application menu > Messages**.
2. Touch the conversation containing the message you want to forward.
3. Tap and hold the message you want to forward.
4. Tap **forward** in the menu that opens.
5. Add recipient(s), touch , then find and mark the contact name. To add more than one contact, mark the contact name for the desired recipients. You can also enter the recipient's phone number manually.
6. Touch to send the message.

Web applications

(Wi-Fi)

Wi-Fi is a wireless networking technology that can provide internet access at distance of up to 100 meters. To use Wi-Fi on your phone, you need to connect to a wireless access point, or "hotspot". Some hotspots are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

TIP: Turn off Wi-Fi when you are not using it, to extend the life of your battery.

■ **Connecting to a Wi-Fi Network**

1. Tap the **Launcher** icon, and from the Application menu, tap **Settings**.
2. Tap **Wi-Fi**.
3. Tap the Wi-Fi switch to activate it. The phone will scan for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.
4. Tap a network to connect to it

If the network is secured, you are prompted to enter a password or other credentials (Ask your network administrator for details)

Browser

Use your web browser to view and navigate web pages, add pages as bookmarks, and save pages for offline reading. You can open several windows at the same time and switch among them easily. You can also request the desktop version of a web page if you don't want to view the mobile version.

- **Open the web browser**

From your Home screen, tap the **Browser** icon or find it by tapping: **Application menu > Browser**.

- **Search and address bar**

Cancel the download of the current web page
Search or type URL
Enter a search word to search for a web page, or enter a web page address to load a web page

Multimedia

Camera

Take a photo or record a video with the camera in your phone. You can hold the camera horizontally or vertically. Share a photo or a video with your friends, or upload your photos and videos to a web service.

Primary: 13MP, F/2.2, autofocus, dual color temperature flash

Features: 1/3.06" optics 1.12µm pixel size, Geo-tagging, face/smile detection, panorama, HDR, effect setting

Video : 1080p@30fps, 720p@30fps

Secondary : 13MP, F/2.2,1/3.06" sensor size,1.12um pixel size, Autofocus, Soft flash

Music Player

The phone comes with a Music player that allow you to plays songs, listen to audio books, and podcasts, etc. You can sort the music by category and customize the playback settings

Tap the **Launcher** icon, and from the Application menu, tap **Music**

Videos

Watch videos stored on the device and customize playback settings.

- Tap the **Launcher** icon, and from the Application menu, tap **Videos**

FM Radio

The phone comes with a in-built FM Radio. You can listen to FM radio stations, and add them to your channel list. You have to plug in an earphone, which will serve as the antenna of the FM radio. You can listen to the radio either through an earphone, or through the speaker in the phone.

Gallery

You can view the captured images, recorded video clips, and downloaded images in the Gallery.

Sound Recorder

You can use the sound recorder to record sounds and also select to save the recordings in your phone

Other applications

Clock Function

The clock allows you to view the time and date. You can also set an alarm for a specific time.

• Add an alarm

1. From your Home screen, tap the **Launcher** icon, then **Application menu > Clock**.
2. Touch .
3. Set the time, ringtone, repeat, vibrate, etc. then, turn the alarm on.
4. After you finish setting, tap **Done**.

Calculator

The calculator allows you to perform. basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use an advanced panel for more complex calculations

Tap **Calculator** on the Apps screen

File manager

You can access and manage various files stored on the device or in other locations such as cloud storage services.

From the Apps screen tap **Tools** then**, My Files**

Connect to a computer via USB

You can connect your phone to a computer with a USB cable to transfer music, pictures, and other files between your phone's SD card and the computer

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:
This device was tested for typical body-worn operations with the back of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories
that cannot maintain 0.5cm separation distance between the user’s body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.
For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:
This product is compliance to FCC RF Exposure requirements and refers to FCC website search for FCC subsection : 2ABN6L530 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10℃ or over maximum 50℃, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.

support@poshmobile.com